

INSTRUCTION MANUAL FOR THE ROAD SNAPSHOT AUTOMOTIVE DASH CAMERA

Dash Camera's Wifi Default Passcode : 12345678



040-1001-HY-WH

Questions ? Call customer service hotline 877-456-7901.

SAVE THIS OWNERS MANUAL AND READ BEFORE USE.

CONTENTS

Important safety instructions & warnings	3
Product overview	4
Install the Hyperion® dash camera	5
Recording modes and video files	7
Viewing and managing videos by Hyperion® app	8
Viewing and managing videos by pc or laptop	12
Upgrading the firmware	14
Troubleshooting	15
Product specifications	16
Customer support	17
Warranty	18

IMPORTANT SAFETY INSTRUCTIONS & WARNINGS

- SAVE THESE INSTRUCTIONS This manual contains important safety and operating instructions for the Road Snapshot automotive dash camera, 040–1001–HY–WH.
- 2) Do not operate this product while driving a vehicle.
- Do not install this product in a position that may obstruct a driver's view of the road.
- Check with your local state or municipality for any laws that may prevent you from mounting this product to your windshield.
- 5) This product is not designed to be used by children.
- 6) Do not expose this product to direct sunlight or intense light.
- Frequently check the product to ensure it is still located in the correct position.
- 8) Extreme road conditions may alter the position of the camera.
- 9) Do not use chemicals or solvents to clean the product.
- 10) The quality of the video may be affected by the road conditions and or the weather conditions outside, such as sunlight or darkness. The presence of street lights may also affect the quality of the video.
- Hyperion[®] is not responsible for the loss of any recorded video during operation.
- 12) This device is intended for use only on the inside of a vehicle only.
- 13) Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- 14) Any modifications to the product will void the warranty.
- 15) This product is not guaranteed to record all events. Use this product for reference only when investigating incidents or accidents.
- 16) Hyperion[®] is not responsible for any loss caused by an accident or for providing any support regarding the outcome.

PRODUCT OVERVIEW

Below is a list of items that should be included in your retail box:



- 1) Dash Camera
- 2) Mounting plate of dash camera
- 3) 12V/24V USB charger
- 4) 16GB memory card and adapter
- 5) Micro USB cable for data transfer to computer or Laptop
- 6) Instruction manual
- 7) Quick guide

CAMERA FEATURES





- 1) Memory card slot
- 2) Reset button
- 3) Micro USB Port-Plug in for getting power or data transfer
- 4) Power Indicator light
 - Dash camera is powered ON
 Firmware upgrade in progress
- 5) Camera mounting plate



- 2) Recording indicator light-
 - Solid red- dash camera has been turned on and is detecting the memory card, but not recording yet
 - Flashing red- dash camera is in recording
- 3) Wifi indicator light-
 - Dash camera has been connected to smartphone via Wifi



Bottom view



- 1) Microphone- Used for voice recording
- 2) Sensor for gesture snapshot

INSTALL THE HYPERION® DASH CAMERA

 Turn off the engine, gently push the memory card into the slot until it locks into place.

NOTE:

ENSURE THAT THE MEMORY CARD HAS BEEN INSERTED IN THE CORRECT DIRECTION. THE METAL CONTACTS ON THE MEMORY CARD SHOULD FACE THE OPPOSITE DIRECTION OF THE LENS.

- Attach the mounting plate to the camera by sliding the plate onto the mounting tab on the camera until it snaps into place.
- Align the mount to the mount rail on the product, and then slide it until you hear a click (1). Then, carefully remove the protective film from the lens (2).
- Peel off the protective film from the double-sided tape on the mounting. plate (3) and attach the dash camera to the windshield behind the rear-viewer mirror (4).







- 5) Adjust the angle of the lens by rotating the body of the dash camera. We recommend pointing the lens slightly downwards (≈10° below horizontal), so as to record video with a 6:4 road to background ratio.
- Use a pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

- Plug the power cord into the cigarette lighter socket and the dash camera.
- 8) Turn on the engine. The dash camera will power on and start recording. Video files are stored on the memory card. When the memory card fills up, the newest video files will start to replace the oldest video files (called loop recording) – so you will always have the most recent video files.

NOTE:

- * THE LOCATION AND SPECIFICATIONS OF THE POWER SOCKET MAY DIFFER BY VEHICLE MAKE AND MODEL.
- * IN CERTAIN VEHICLES THE CIGARETTE PORT CONTINUES TO SUPPLY POWER EVEN WHEN THE VEHICLES IGNITION IS OFF. IF YOUR VEHICLE IS CONFIGURED LIKE THIS YOU WILL NEED TO DISCONNECT THE CAMERA TO PREVENT THE VEHICLES BATTERY FROM DRAINING. CHECK THE VEHICLES OWNER'S MANUAL FOR DETAILS.
- * THIS DASH CAMERA SUPPORTS UP TO 64GB MICROSD MEMORY CARD WITH A SPEED RATING OF CLASS 10, UHS-1 OR HIGHER.







RECORDING MODES AND VIDEO FILES

Your dash camera will automatically power on and start recording when it is connected to a power source.

Wait until the product is completely booted up after turning it on, and then begin operating the vehicle. The video recording does not begin until the product is completely turned on (booted up).

1) There are 3 recording modes of Hyperion® dash camera, as following:

Crash	Built-in G-sensor automatically records and locks video file when a collision or crash is detected.
detected	The videos will be stored in the " Event " folder.
Loop-recording	The dash camera records seamless video clips automatically and stored in the "Loop-record "folder. Once the memory card is full. The dash camera overwrites older files in order to maintain uninterrupted recording.
Gesture	During driving, use hand gesture as a trigger to capture a snapshot
Snapshot	on the road, and stored in the " Snapshot " folder

2) Video files storage locations

Videos are stored in the following folders of memory card according to their recording mode.

IN THE ME	MORY CARD	Event	Loop-record	Snapshot
< This	PC Memory card			 ▼ 49
This PC	Name	Date modified	Туре	Size
Windows (C:)	Event	2018/07/13 20:00	File holder	419,873 KB
Data (D:) Data (E:)	Loop-record	2018/07/13 20:00	File holder	919,873 KB

3) Video file name

A file name is composed of the recording start date and time.

		YY	MM	DD		ΗH	MM	SS	
Event	EMER-	18	01	01	-	14	00	30	.mp4
Loop-record	FILE-	18	01	01	-	14	00	30	.mp4
Gesture Snapshot	IMG-	18	01	01	-	14	00	30	.jpg

4) Dash camera recording time

Memory card capacity	Resolution			
	1080P	720P		
16GB	2HR 45MIN	4HR		
32GB	5HR 30 MIN	8HR		
64GB	11HR	16HR		

NOTE:

- * THIS DASH CAMERA SUPPORTS UP TO 64GB MICROSD MEMORY CARD WITH A SPEED RATING OF CLASS 10, UHS-1 OR HIGHER.
- * ONCE THE MEMORY CARD IS FULL. THE DASH CAMERA OVERWRITES OLDER FILES IN ORDER TO MAINTAIN UNINTERRUPTED RECORDING.
- * TOTAL RECORDING TIME IS DIFFERENT DEPENDING ON THE MEMORY CAPACITY OF THE MEMORY CARD, THE RESOLUTION OF THE VIDEO AND THE NUMBER OF SNAPSHOT PHOTOS SAVED ON MEMORY CARD.

VIEWING AND MANAGING VIDEOS BY HYPERION® APP

- 1) Look for the Hyperion® App on the Google Play and Apple App store, and install it on your smartphone.
- 2) Ensure the dash camera had been turned on.
- 3) Go to your smartphone's Settings then select Wifi(1), and make sure Wifi is turned on(2).
- Choose your Hyperion[®] dash camera from the network list. The dash camera's SSID begins with HYPERION-e (e.g. HYPERION-e-****)(2).
- Enter the password and tapjoin, the default password is 12345678. Then open the Hyperion[®] APP and click the button "Connect to dash camera" (3) for get in the main screen (4).
- Suggest to access "Reset Wifi passcode" on the Settings of Hyperion[®] APP to reset the passcode before use (s).







NOTE:

- * DIRECT WI-FI LETS YOU DIRECTLY CONNECT YOUR SMARTPHONE TO YOUR DASH CAMERA VIA WI-FI WITHIN A RANGE OF 10M.
- * THE HYPERION $^{\circ}$ APP SUPPORTS DEVICES RUNNING ANDROID 4.4.2 AND HIGHER, OR IOS 9.0 AND HIGHER.

MAIN SCREEN OF HYPERION[®] APP (ANDROID/IOS)



Video replay

Hyperion® dash camera can record video under 2 categories:

- Loop recording: The dash camera records seamless video clips automatically Once the memory card is full. The camera overwrites older files in order to maintain uninterrupted monitoring.
- Crash detected: Built-in G-sensor automatically records and locks video file when a collision or crash is detected.





Snapshot gallery



NOTE:

* PLEASE WAVE YOUR HAND HORIZENTALLY 4 INCHES UNDER THE SENSOR TO TAKE A PHOTO, DO NOT EXCEED 5 INCHES. SENSOR MAY NOT WORK IF THE SURROUNDING IS TOO DARK.



Setting

Go to the menu to set up the dash camera.



ltem	Selection
Video quality	720P and 1080P
Video length	1 min, 3 mins and 5 mins
Record video with sound	ON and OFF
Time stamp on video	ON and OFF
Voice notification	ON and OFF
Gesture snapshot	ON and OFF
Return to default	OK and cancel
Format SD-card	OK and cancel
Reset Wifi passcode	Change the passcode of Wifi connection

VIEWING AND MANAGING VIDEOS BY PC OR LAPTOP

You can view and manage the recorded video on your PC or Laptop, as the sequence on below.

1) Unplug the power cord to turn off the dash camera.

2) Connect the dash camera and PC or Laptop by using Micro USB cable included in the packaging (2), Or

Either gently press on the memory card to release the lock then carefully pull the memory card out from dash camera

Then use the included memory card adapter to connect the card to a computer.(1)



3) Open the memory card in you PC or Laptop, and use any media player that supports to MP4 file to play back the video.



< 🔋 🕨 This	PC Memory card			▼ 4≠	P
This PC	Name	Date modified	Туре	Size	
Windows (C:)	Event	2018/07/13 20:00	File holder	419,873 KB	
Data (D:) Data (E:)	Loop-record	2018/07/13 20:00	File holder	919,873 KB	
Data (F:)	Snapshot	2018/07/13 20:00	File holder	219,873 KB	

UPGRADING THE FIRMWARE

A firmware upgrade is provided to enhance the products's feature, operation or to increase stability. For optimal operation of the products features, ensure that you keep the firmware up to date.

- On your PC, open a web brower and go to http://Hyperion-global.com/ support.
- 2) Select the product and download the latest firmware upgrade file.
- 3) Unzip the downloaded file. (If necessary).
- 4) Disconnect power to the product and remove the memory card.
- 5) Access the memory card front PC and copy the firmware upgrade file to the root folder of the memory card.

< 📘 🕨 This	s PC Memory card			▼ 4 /	ρ
This PC	Name	Date modified	Туре	Size	
Windows (C:)	Event	2018/07/13 20:00	File holder	419,873 KB	
Data (D:) Data (E:)	Loop-record	2018/07/13 20:00	File holder	919,873 KB	
Data (F:)	Snapshot	2018/07/13 20:00	File holder	219,873 KB	

- 6) While the power is disconnected from the product, insert the memory card into the memory card slot on the product.
- 7) Connect the power cable to the product. Then the power indicator will start to flash, that means dash cam is installing the firmware upgrade file. When power indicator turns to solid green, that means firmware upgrade has been completed.



NOTE:

* DO NOT DISCONNECT THE POWER OR REMOVE THE MEMORY CARD FROM THE PRODUCT DURING THE UPGRADE. DOING SO MAY CAUSE SERIOUS DAMAGE TO THE PRODUCT, OR TO THE DATA STORED IN THE MEMORY CARD.

TROUBLESHOOTING

The following table lists the problems users may encounter while using the product and measures to resolve them.

If the problem persists after taking the measures provided in the table, contact the customer service center.

Problems	Description
Cannot power on the product	 Make sure the power cable (the car charger or the hardwiring cable) is connected to the vehicle and the product properly. Check the vehicle's battery level.
The voice guide and/or buzzer do not sound	Please go to the main menu (setting page) in APP and ensure the "voice notification" has been turned on.
The video is unclear or hardly visible	 Ensure that the protective film on the camera lens has been removed. The video may look unclear if the protective film is still on the camera lens. Check the installation location of the camera, turn on the product, and then adjust the camera's view angle.
The memory card cannot be recognized	 Ensure that the memory card has been inserted in the correct direction. Before inserting the memory card, ensure that the metal contacts on the memory card faces the opposite direction from the lens of this product. Turn off the power, remove the memory card, and then check to ensure that the contacts in the memory card slot are not damaged.
The recorded video cannot be played on a PC	The recorded videos are stored as MP4 video files. Ensure that the video player installed on your PC supports the playback of MP4 video files.
The dash camera stopped responding	Please use straightened paper clip and press the hidden reset button to reboot the dash camera.
Forgotten dash camera Wifi passcode	Use your finger to completely block the sensor of gesture snapshot and hold for 10 seconds until a voice prompt to comfirm that the passcode has been reset to default. (Default passcode is 12345678)

PRODUCT SPECIFICATIONS

Model Name	LX1801SD
Color/Size/Weight	Black / Length96mm x Width 33.3 mm x Height 47.4 mm / 57.2g
Camera	CMOS Sensor (Approx. 2.1 megapixels)
Operation temperature	14°F - 140°F (-10°C to 60°C)
Storage temperature	-4°F - 158°F (-20°C to 70°C)
MicroSD memory card	Supports up to 64GB MicroSD with a speed rating of class 10, UHS-1 or higher
Reset	Insert an unbent paper clip to reset your device if it has crashed and is unresponsive
Micro USB port	Connects the device to the power source
Video resolution	1080P/30fps; 720P/30fps selectable
Photo resolution	1920x1080 Megapixels
Photo format	JPG
View angle	120°
Video format	MP4
G - Sensor	3-Axis Acceleration Sensor
Recording method	Loop recording and crash detection & recording
Sound recording	Built-In Microphone
Memory location	Only store on memory card
Wifi	Built-in (2.4 GHz)
Microphone	Built-in
Speaker (Voice guidance)	Built-in
LED Indicators	Recording, Wifi connected and power on
Backup battery	Built-in super capacitor
Input power	DC 12V-24V, 1.5A MAX
Power consumption	400mA - 500mA *Actual power consumption may vary depending on use conditions and environment.

CUSTOMER SUPPORT

For customer support and firmware updates please visit Deltran-Global.com. You can also call our customer service hotline **877-456-7901**

Please back up all important files and data before requesting service. In order to service the dashcam it may be necessary to delete all files and data from the dashcam. All servicing is provided on the basis that the user has backed up all necessary files and data before requesting service. Therefore Deltran USA LLC will not be responsible for the loss of any files of data.

REGULATORY WARNINGS FEDERAL COMMUNICATIONS COMMISSION (FCC)

Title 47 Subpart, 15.105(b)

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GOVERNMENT OF CANADA

ICES-001: Industrial, Scientific, and Medical (ISM) Radio Frequency Generators This product has been tested with the listed standards and found to be compliant with the Code of Industry Canada ES-001 and the measurement Procedure according to CISPR 11.

CAN ICES-1/NMB-1

WARRANTY

The Hyperion® Dash Camera comes with a twelve (12) month limited warranty against defects or failure within one (1) year of purchase.

THIS LIMITED WARRANTY IS VOID under the following conditions:

- The product is misused, subjected to careless handling, or operated under conditions of extreme temperature, shock, or vibration beyond our recommendations for safe and effective use.
- The product is disassembled or repaired by anyone who is not an authorized service representative.
- 3) The product was purchased from an unauthorized source. Warranty is not transferable from the original purchaser.
- 4) Any physical damage to the Dash Camera or any accessory after purchase.
- 5) Any modifications to the Dash Camera.